

| Months/Miles (1,000) | Pre-Trip Fuel Fill | 3/3 | 6/6 | 9/9 | 12/12 | 12/12 | 18/18 | 21/21 | 24/24 | 27/27 | 30/30 | 33/33 | 36/36 | 39/39 | 42/42 | 45/45 | 48/48 | 51/51 | 54/54 | 57/57 | 60/60 | 63/63 | 66/66 | 69/69 | 72/72 | 75/75 | 78/78 | 81/81 | 84/84 | 87/87 | 90/90 | 93/93 | 96/96 | 99/99 | 100/100 | | |
|----------------------|--|-----|-----|-----|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|---------|---|---|
| 1 | Auto Park Brake Inspection | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| 2 | Check All Lines, Hoses and All Fluids | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| 3 | Check Front and Rear Shocks for Leaks | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| 4 | Check Tire Pressure/Air Bag Pressure (P Series Only) | ✓ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | Check Engine Oil | ✓ | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | Inspect Belts | ✓ | | | | | | | | | | | | | | | | | | | | ✓ | | | | | | | | | | | | | | | |
| 7 | Check All Exterior Lights | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| 8 | Change Engine Oil and Filter | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| 9 | Inspect & Lubricate Chassis Components** | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| 10 | Check/Change Axle Fluid* | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| 11 | Inspect Exhaust System | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| 12 | Rotate Tires | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| 13 | Inspect & Lubricate Chassis Brake System***** | | | | ✓ | | | | ✓ | | | | ✓ | | | | ✓ | | | ✓ | | | ✓ | | | | ✓ | | | | | | | ✓ | | | |
| 14 | Check Front & Rear U-bolt Torque & Stabilizers | | | | ✓ | | | | ✓ | | | | ✓ | | | | ✓ | | | ✓ | | | ✓ | | | | ✓ | | | | | | | | ✓ | | |
| 15 | Clean & Pressure Check Radiator Cap | | | | ✓ | | | | ✓ | | | | ✓ | | | | ✓ | | | ✓ | | | ✓ | | | | ✓ | | | | | | | | | ✓ | |
| 16 | Front Wheel Bearing Adjustment & Lubrication (Pack P-Series) | | | | | ✓ | | | | ✓ | | | | | | | ✓ | | | ✓ | | | | | | | ✓ | | | | | | | | ✓ | | |
| 17 | Inspect Shields & Under Hood Insulation | | | | | ✓ | | | | ✓ | | | | | | | ✓ | | | ✓ | | | | | | | ✓ | | | | | | | | | ✓ | |
| 18 | Check/Change Air Cleaner | | | | | ✓ | | | | ✓ | | | | | | | ✓ | | | ✓ | | | | | | | ✓ | | | | | | | | | ✓ | |
| 19 | Change Fuel Filter | | | | | | | | ✓ | | | | | | | | ✓ | | | | | | | | | ✓ | | | | | | | | | | ✓ | |
| 20 | Brake Fluid Change***** | | | | | | | | ✓ | | | | | | | | ✓ | | | | | | | | | ✓ | | | | | | | | | | ✓ | |
| 21 | Transmission | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 22 | GM ***** | | | | | | | | | | | | | | | | | | ✓ | | | | | | | | | | | | | | | | | | ✓ |
| 23 | Allison ***** | | | | ✓ | | | | ✓ | | | | ✓ | | | | ✓ | | | | | ✓ | | | ✓ | | | | ✓ | | | | | | | ✓ | |
| 24 | Inspect Fuel Tank, Cap & Lines | | | | | | | | | | | | | | | | | | | | | ✓ | | | | | | | | | | | | | | | |
| 25 | Evap Control Emissions Inspect | | | | | | | | | | | | | | | | | | | | | ✓ | | | | | | | | | | | | | | | |
| 26 | Check All Wheel Nuts for Torque** | | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | |
| 27 | Inspect Spark Plug Wires | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | ✓ |
| 28 | Replace Spark Plugs | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | ✓ |
| 29 | Check Positive Crankcase Ventilation (PVC) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | ✓ |

* Standard Differential: Check fluid every oil change and add as needed. If driving in dusty conditions or towing a trailer drain and refill every 15,000 miles.
 * Dana 70/80/S135: Check fluid every oil change and add as needed. If driving in dusty, sandy, wet conditions or towing a trailer, change lubricant every 25,000 miles or 6 months (whichever occurs first).

** Wheel Nut Torque to be checked at 100, 1,000 and 6,000 miles

*** Chassis Lubrication points
 - Front suspension, Kingpin bushings, Steering linkage, Automatic trans shift linkage, Parking brake cable guides, Prop shaft splines, Universal joints, Brake pedal spring, Auto park brake cam and linkage, Brake pedal pivot shaft

Notice: Change Allison spin on filter and top-off fluid at 5,000 miles
 **** Allison Transmission with Dexron III change spin on filter and fluid every 12 months or 25,000 miles (whichever occurs first)
 **** Allison Transmission with Synthetic fluid ATF TranSynd change spin on filter and fluid every 4 years or 100,000 miles (whichever occurs first)

***** GM Hyrdamatic Transmission filter and fluid change every 50,000 miles
 ***** Inspect/Lubricate brake components such as the slides, guides, pivots, slide pins, linings and linkage

Notice: Fuel filter is to be replaced every 24 months/24,000 miles. Depending on the quality of fuel used this time frame may be reduced.
 Notice: This is intended for quick reference guide only. For complete maintenance parameters and procedures please refer to the applicable Workhorse Model Year Owner's/Operator's Manual.
 Notice: For complete maintenance parameters covering Cummins, International and Caterpillar equipped Workhorse Chassis, please refer to the applicable Engine Manufacturers' Maintenance/Operator's Manual.

